

orbit™ Toddler Stroller Seat Manual



Before You Begin

Welcome!	3
Your Child's Safety Depends On You	6

Be Safe

Warnings	8
Weight and Use Limitations	10
Questions? Missing Parts?	10
Registering Your Toddler Stroller Seat	11

Strolling with Your Child

Docking & Undocking the Toddler Stroller Seat	12
Unfolding & Folding the Toddler Stroller Seat	14
Using the Restraint Harness	16
Rotating the Toddler Stroller Seat	17
Attaching and Using the Support Bar	18
Reclining the Toddler Stroller Seat	20
Using the Sunshade and Sunshade Extension	21

Maintaining Your Stroller Seat

General Cleaning	22
Removing the Upholstery Pad	23
Removing the Sunshade	24
Removing the Seat Fabric	25
Warranty	26

Welcome!	3
Your Child's Safety Depends on You	6

Welcome to the Orbit Baby family!

Congratulations on the purchase of your Toddler Stroller Seat.

Please read through this instruction manual carefully. For the safety of your child, as well as others, make sure anyone else using the Toddler Stroller Seat reads and understands these instructions as well.

Not all photos in this manual include the most up-to-date product specifications.

Terms You Need to Know: Stroller Seat



Terms You Need to Know: Stroller Seat



Your Child's Safety Depends On You

Strolling with your child presents inherent safety risks. However, proper use of the Toddler Stroller Seat and Stroller reduces the risk of injury to yourself, your child and others. This instruction manual guides you in detail about proper use of the features of the Toddler Stroller Seat. Adhering to the following safe practices also helps ensure your child's safety.

Follow these instructions and the appropriate instructions for other Orbit products that you use with the Stroller Seat.

Never leave your child unattended.

Always Secure Your Child.

Always secure your child with the Safety Harness when your child is in the Toddler Stroller Seat.

Always Dock Safely.

Only dock one Orbit product at a time.

Only attempt to dock approved Orbit products.

Listen for an audible CLICK when docking the Toddler Stroller Seat, which indicates that the Stroller Seat is correctly installed.

Always make sure that the Toddler Stroller Seat is securely locked by pulling upwards and turning. The Stroller Seat should not move.



Your Child's Safety Depends On You cont'd

Always make sure that the Toddler Stroller Seat is locked in forward or rear-facing position before moving. Side facing positions are for stationary use only.

Always Keep the Hub Area Clean.

Keep all metal and plastic surfaces clear of objects, debris, and liquids to allow proper and safe function.

Never place the Toddler Stroller Seat in sand or other surfaces with fine, loose particles.

Always Use the Toddler Stroller Seat secured to a SmartHub.

The Toddler Stroller Seat is not a stand-alone product. Prevent injury from falls and tipping as the Stroller Seat is not stable unless docked into a SmartHub.

CLICK AND CHECK

When using Orbit products, always pay attention to the **CLICK** (through sound and feel) that says you've successfully completed a step. Then, always immediately follow up with a **CHECK** by tugging or pulling what you just clicked into place.

Warnings	8
Weight and Use Limitations	10
Questions? Missing Parts?	10
Registering Your Toddler Stroller Seat	11

WARNING Death or Serious Injury can occur

⚠ FAILURE TO FOLLOW THESE INSTRUCTIONS AND THE PRODUCT LABELS CAN RESULT IN SERIOUS INJURY OR DEATH TO YOUR CHILD. DO NOT let others install or use the Toddler Stroller Seat and other associated or connected Orbit products unless they understand how to properly use them. Keep this instruction manual for future use. If the instruction manual is missing, call Orbit Baby at 1-877-ORB-BABY for a replacement manual.

⚠ Do not use the Toddler Stroller Seat in motor vehicles.

⚠ Adult assembly of the Toddler Stroller Seat is required before use.

⚠ Avoid injury to your child during Toddler Stroller Seat use:
Avoid pinching injuries: make sure your child's hands, arms, legs and feet are clear of moving parts, especially when folding and unfolding the Toddler Stroller Seat.

WARNING Death or Serious Injury can occur

Be sure the Toddler Stroller Seat is fully open and locked before letting your child near.

Always fasten the Safety Harness snugly around your child whenever your child is in the Toddler Stroller Seat.

Never leave your child unattended.

Beware of obstructions striking your child's legs or arms when using the Toddler Stroller Seat.

Use only Orbit tested and approved accessories with the Toddler Stroller Seat.

⚠ Avoid serious injury from falling or tipping with the Toddler Stroller Seat:

Always make sure the Seat is securely locked by pulling upwards and turning. The Seat should not move.

Always make sure that seat is locked in forward or rear-facing position before moving.

Do not rotate the Toddler Stroller Seat when in motion.

Bags and other items, unless they are Orbit Baby approved accessories, should not be attached or hung from the Toddler Stroller Seat.

Weight and Use Limitations

Use the Toddler Stroller Seat with one child at a time. The child must weigh 40 pounds (18 kgs) or less.

The Toddler Stroller Seat should only be used with children who can sit up unassisted. It is NOT for use with newborns.

Questions? Missing Parts?

Your Toddler Stroller Seat should have arrived with the following parts:

- Support Bar
- Rain Shield
- Mosquito Net
- Snack Pouch
- Instruction Manual
- Carry Tote

If you have questions about any of these parts, contact Orbit Baby at 1-877-ORB-BABY (1-877-672-2229) or visit our website at www.orbitbaby.com.

Please have the model number, serial number and manufacture date ready when you contact us. These numbers can be found on the Product Information Label on the bottom of the Stroller Seat Hub.

Registering Your Toddler Stroller Seat

Register the Stroller Seat so that we can keep in touch with you in the future.

Send your name, address, the product's model number and its manufacturing date to:

Orbit Baby, Inc.
8445 Central Ave.
Newark, CA 94560

or call:

1-877-ORB-BABY
(1-877-672-2229)

or log onto:

www.orbitbaby.com/register



The Product Information Label is located on the bottom of the Stroller Seat Hub

Docking & Undocking the Toddler Stroller Seat	12
Unfolding & Folding the Toddler Stroller Seat	14
Using the Restraint Harness	16
Rotating the Toddler Stroller Seat	17
Attaching and Using the Support Bar	18
Reclining the Toddler Stroller Seat	20
Using the Sunshade and Sunshade Extension	21

⚠️ WARNING ⚠️

Improper handling of the Toddler Stroller Seat increases the risk of serious injury and death

Avoid pinch hazards: Ensure that fingers and appendages are clear of the SmartHub area.

Never undock the Stroller Seat while a child is seated in it.

Never rotate the Stroller Seat while it is in motion. Make sure the Orbit Product that the Stroller Seat is docked into is locked in place and stable.

Docking & Undocking the Toddler Stroller Seat

1. Make sure the Orbit product you are docking the Stroller Seat into is stable and locked in place.
2. Grab the sides of the Stroller Seat and make sure that nothing is obstructing the Hub area (Photo A).
3. Press the Stroller Seat firmly onto the SmartHub until you feel and hear a CLICK. (Photo B)
4. CHECK the security of the docking by pulling up on the Stroller Seat, it should not move.
5. Rotate the Stroller Seat into one of its four rotational locking positions.

To Undock and Remove the Seat:

1. Lift the Stroller Seat while holding both Release Levers squeezed. (Photo C)





D



E



F

Unfolding & Folding the Toddler Stroller Seat

⚠ WARNING ⚠
Death or Serious Injury
can occur

Avoid pinch hazards: Keep hands and children away from all moving parts when unfolding and folding product.

Never unfold or fold the Stroller Seat with a child in or near the product.

To Unfold the Stroller Seat:

1. Disengage the Fold Lock. (Photo D)
2. Unfold the Stroller Seat by pulling up on the Twist Grip until you hear and feel a CLICK. (Photo E)
3. CHECK that the Stroller Seat is fully locked open by pushing down on the Twist Grip and making sure that it does not move.

Unfolding & Folding the Toddler Stroller Seat cont'd

To Fold the Stroller Seat:

1. Reach into the Sunshade Flap to grab the Twist Grip. (Photo F)
2. Depress the green Safety Button (Photo G) and turn the Twist Grip forward in the direction of the arrow. (Photo H).
3. Keeping the Twist Grip rotated, push downward on the Twist Grip.
4. Engage the Fold Lock on the side. (Photo I)
6. For storage flexibility, you can squeeze the Release Levers and easily remove the folded Stroller Seat from the SmartHub.

STROLLER TIP

You can fold your Stroller with the Stroller Seat attached, or remove the Stroller Seat and fold the Stroller separately.



G



H



I



J



K



L

Using the Restraint Harness

⚠ WARNING ⚠
Death or Serious Injury
can occur

Always restrain your child with the Safety Harness when using the Seat.

1. Position the Safety Harness to just below, or level with, your child's shoulders. For the lower position, pass the Shoulder Strap under the loop. (Photo J)
2. If using the Upholstery Pad, pass the Shoulder Strap through the matching slot. (Photo K) Clip the ends of the Shoulder Strap to the corresponding Lap Strap. (Photo L)
3. Position the straps around your child and CLICK both Lap Straps into the Crotch Clip. (Photo L)
4. CHECK the security of the Safety Harness by tugging to make sure the Clips do not come disengaged.

Rotating the Toddler Stroller Seat

⚠ WARNING ⚠
Death or Serious Injury
can occur

Only rotate the Toddler Stroller Seat when stationary.

Always fully support the Stroller Seat by firmly grasping it with both hands.

Always make sure that the Stroller Seat is locked in forward or rear-facing position before moving. Side-facing positions are for stationary use only.

1. Pull both Release Levers. (Photo M)
2. Rotate the Stroller Seat and stop pulling the Release Levers. The Stroller Seat will lock into the next rotational stop position. (Photo N)



M



N



O

Attaching and Using the Support Bar

⚠ WARNING ⚠
Death or Serious Injury
can occur

Avoid injury, keep your child clear of the Support Bar ends and the Bar Locks.

The Support Bar is only meant as an added support, you must still always use the Safety Harness properly when your child is in the Toddler Stroller Seat.

To install the Support Bar:

1. Orient the Support Bar right-side-up. (Photo O)
2. Making sure that both Bar Locks are open, press the ends of the Bar onto the Stroller Seat frame, between the two locating bosses. (Photo P)



P

Attaching and Using the Support Bar cont'd

3. CLICK both Bar Locks closed by snapping the lever around the tubing. (Photo Q)
4. CHECK that the attachment is secure by pulling on the Support Bar to make sure that it does not detach.
5. For convenience in placing your child in or out of the Seat, you can unclip one side of the Support Bar and swing it aside. (Photo R)
6. Reattach the free end by following the instructions above, but for only one side.



Q



R



S

Reclining the Toddler Stroller Seat

⚠ WARNING ⚠
Death or Serious Injury
can occur

Only adjust the recline of the Stroller Seat while it is stable and stationary.

1. Support the backboard of the Seat with one hand. (Photo S)
2. With your other hand, unclip the Recline Clip. (Photo T)
3. Gently let the backboard settle down into its reclined position. (Photo U)

To return the backboard back to its upright position:

1. Raise it and reclip the Recline Clip.



T



U

Using the Sunshade and Sunshade Extension

1. Push the Sunshade forward for more coverage.
2. To see your child, open the Sunshade Flap. (Photo V)
3. For extra coverage, pull the Sunshade Extension forward from underneath the Sunshade. (Photo W)



V



W

General Cleaning	22
Removing the Upholstery Pad	23
Removing the Sunshade	24
Removing the Seat Fabric	25
Warranty	26

General Cleaning

The Upholstery Pad and Seat Fabric can be machine washed in cold water on gentle cycle with a mild laundry detergent.

Orbit Baby always recommends using a front loading washer and washing the Upholstery Pad and Seat Fabric inside a pillow case to avoid damage to these items.

Remove all plastic and wooden panels before washing.

Line dry.


All hard parts (plastic and metal) should be wiped clean with a damp cloth. **DO NOT SUBMERGE OR HOSE OFF ANY PART OF THE STROLLER SEAT.**

Removing the Upholstery Pad

1. Undo all four hook and loop fasteners at the back and bottom of the Seat Fabric. (Photo A)
2. Completely unclip the Safety Harness. (Photo B)
3. Pass all the Safety Restraint straps through the Upholstery Pad slots and remove the Upholstery Pad. (Photo C)

To replace the Upholstery Pad, reverse the instructions above.



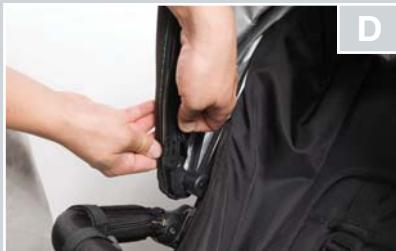

D

Removing the Sunshade

1. Unzip the Sunshade from around the metal support bar. (Photo D)
2. Unsnap both corners of the Sunshade from the plastic pivot fittings. (Photo E)
3. Remove the Sunshade by undoing all of the remaining hook and loop fasteners. (Photo F)



E



F

To replace the Sunshade, reverse the instructions above.

○

Removing the Seat Fabric

1. Undo all four snaps that hold the Seat Fabric onto the tubes. (Photo G)
2. Undo the hook and loop fasteners at the bottom of the Seat Fabric. (Photo H).
3. After taking the Seat Fabric off, remove both inner boards by opening the hook and loop fasteners on the board pockets.
4. Thread the Safety Harness straps through the inner boards and Seat Fabric slots. (Photo I)

To replace the Seat Fabric, reverse the instructions above.



G



H



I

Limited Customer Warranty

What this limited warranty covers and for how long:

Orbit Baby, Inc. ("Orbit Baby") warrants that the product accompanied by this limited warranty is free from manufacturing defects in material or workmanship for a period of two (2) years from the date of original purchase. This warranty only applies to the original purchaser of the product. The limited warranty period also applies to any implied warranties that may exist under applicable law. Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

What this limited warranty does not cover:

This limited warranty does not apply to: (1) defects resulting from repair (except by Orbit Baby or its authorized service representatives) or alteration of the product, (2) defects resulting from use with covers, inserts, accessories, tightening devices, or other components not supplied by or expressly approved in writing by Orbit Baby, and (3) defects resulting from misuse, including any use not in accordance with the product instructions, abuse, accident, neglect, improper maintenance or handling, or normal wear and tear.

What Orbit Baby will do:

If you believe the product is defective please return it to Orbit Baby in the manner described below within the limited warranty period. If Orbit Baby determines a defect is covered by this limited warranty, Orbit Baby will,

Limited Customer Warranty cont'd

at its option, repair or replace the product or components of the product. This limited warranty extends to repaired and replacement products and components only through the end of the original limited warranty period.

What Orbit Baby and its distributors and resellers are not responsible for:

In no event will Orbit Baby or any of its retailers, dealers, distributors or resellers be liable for incidental, indirect or consequential damages relating to the product (including any repaired or replacement product or component) or its use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you.

How State law applies:

This limited warranty gives you specific legal rights, and you may have other rights which vary from State to State.

What you must do to get service under this limited warranty:

To make a claim under this limited warranty you must first contact Orbit Baby. Please write to: Orbit Baby, Inc., 8445 Central Ave., Newark, CA 94560, or call 1-877-672-2229 or email to support@orbitbaby.com. You must provide proof of purchase in the form of your original sales receipt in order to obtain service under this limited warranty.

Please keep this instruction manual for future use.

Customer Service & Replacement Parts

There are three ways to contact Orbit Baby Customer Service with questions or comments, or to order replacement parts:

- | | |
|-----------------|---|
| 1. by internet: | www.orbitbaby.com/support |
| 2. by email: | support@orbitbaby.com |
| 3. by phone: | 1-877-ORB-BABY (1-877-672-2229) |

When you contact us, please have your product's model number, serial number, and date of manufacture ready. These numbers can be found on the Product Information Label on the bottom of the Stroller Seat Hub (see page 11).

U.S.Pat.No. 7,338,122. Other U.S. Patents Pending.
European Patent Application No. 05751808.6.